DISCLAIMER

ACKNOWLEDGMENTS

TABLE OF CONTENTS (continued)

Page

7. SUBGRADE SOILS 55
Design Considerations 55
Construction Considerations 57
Drainage 60
Swelling Soils 60

8. TRENCH BACKFILLING 61

9. REFERENCES

1. INTRODUCTION

This document is the second in a series of three manuals produced for the South Dakota Department of Transportation. It is intended for use by county superintendents and other county roadway agency personnel within the State of South Dakota for the efficient selection of maintenance, rehabilitation, and reconstruction alternatives for rural gravel, blotter, asphalt concrete (AC), and portland cement concrete (PCC) roads. The first manual, Rural Road Condition Survey Guide, provides a methodology for determining the condition of rural paved and gravel-surfaced roads. The third manual, Rural Road Management Guide, provides direction for establishing county-wide management systems for rural paved and gravel-surfaced roads.

The Rural Road Design, Maintenance, and Rehabilitation Guide was developed to provide the counties of South Dakota with an established, uniform set of guidelines for

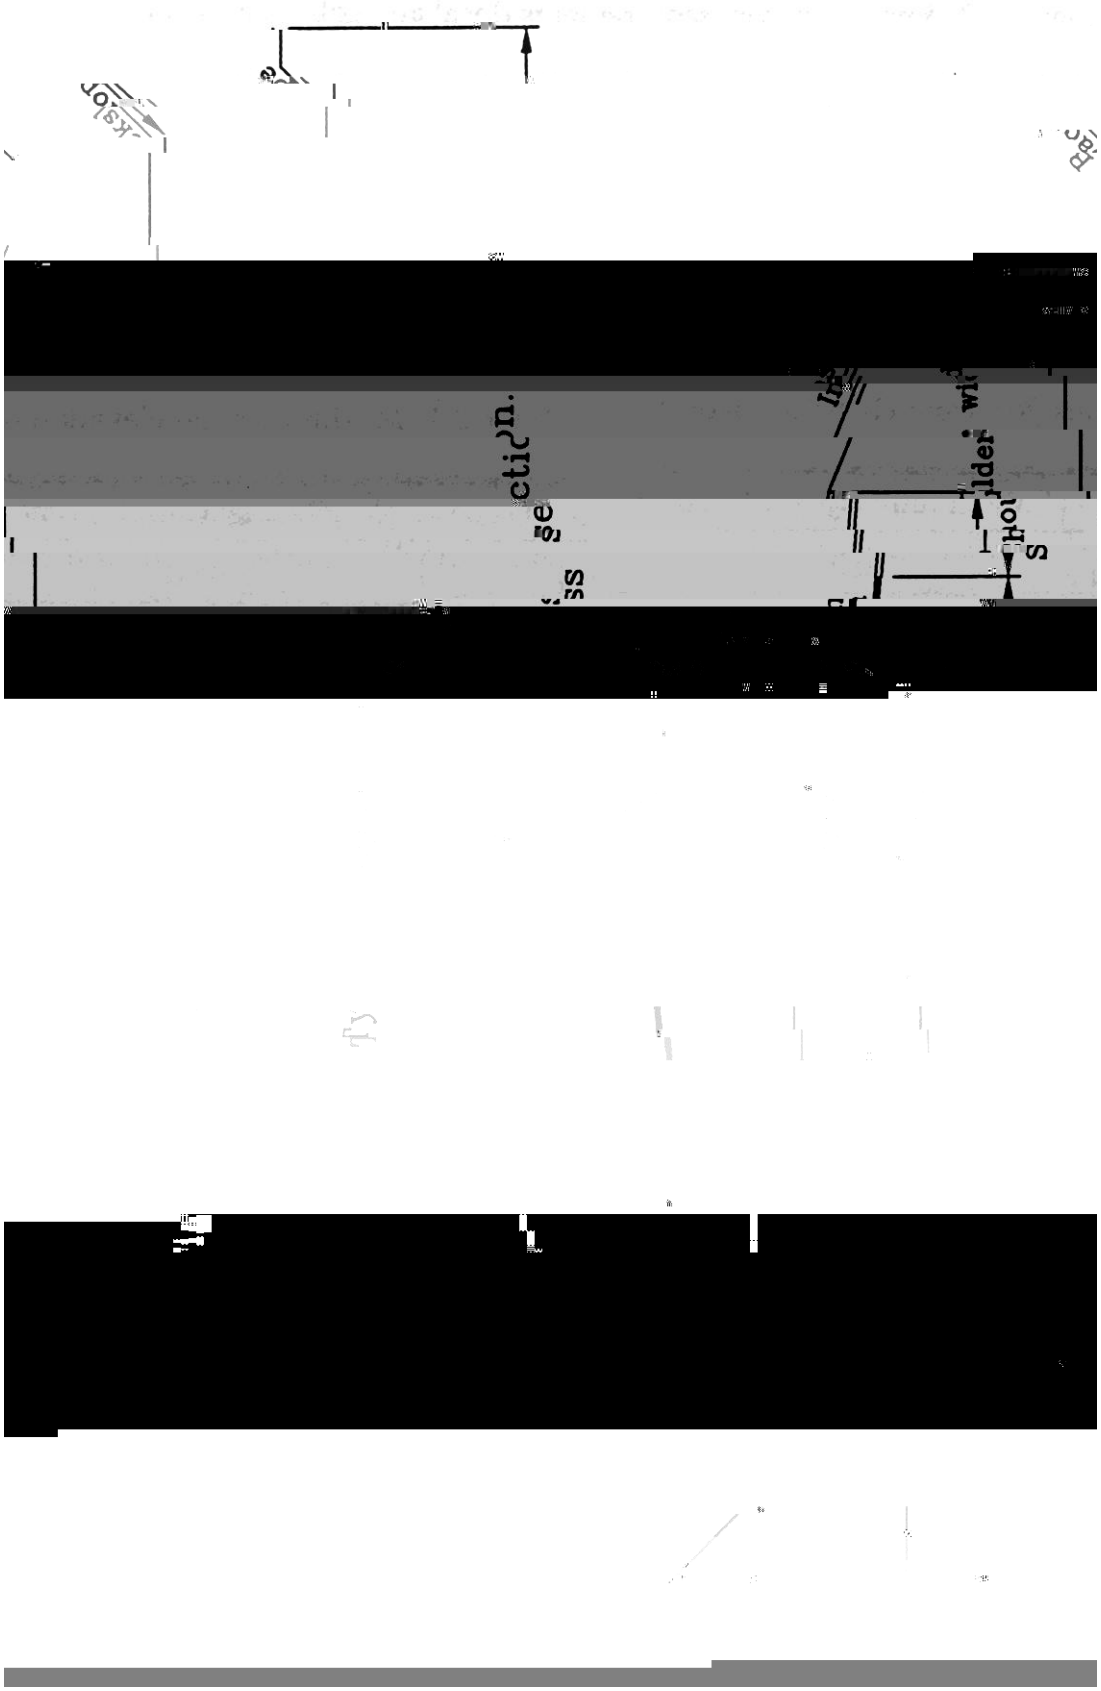

Table 2.3. Surface crown requirements (local and collector roads).

Surface type	Rate of surface crown, %
High	1.5 to 2.0
Intermediate	1.5 to 3.0
Low	2.0 to 6.0

2.2.1. Design Speed

Design speed is the maximum safe speed that can be maintained under favorable conditions and should be consistent with the speed a driver is likely to expect. Typically, the posted speed should be less than the design speed. Design speed influences a YHKLFOH·V VWRSSLQJ VLJKW GLVWDQFH DQG VLGH IULFWLRQ applicable to roads with winding alignment in rolling or mountainous terrain. Higher design speeds are applicable to roads in level terrain or where other environmental conditions are favorable.

2.2.2. Width of Roadway

The roadway width is defined a s the combined width of the traveled way (trafficked area) and the shoulders. The minimum width of traveled way for rural roads is 5.5 m (18

$$D = \frac{5{,}729.6}{R} \qquad \text{(Eq. 2.1)}$$

where

D = Degree of curvature.
R = Curve radius, ft.

2.2.6. Pavement Surface Crown

Pavement surface crown, or cross slope, should be adequate to provide proper surface drainage. The surface crown for rural roads typically ranges from 1.5 to 6.0 percent, depending on the pavement surface type. A summary of surface crown requirements is provided in Table 2.3. High-type pavements retain structural integrity and do not ravel if placed on a stable subgrade. The smoothness characteristics and proper crown of the surface enable drivers to steer easily and maintain a proper path. On the other hand, low-type pavements with raveled or loose surfaces, such as gravel, require greater steering effort to maintain a correct path. The surface type should be provided commensurate with the design speed selected for the road.

2.2.7. Superelevation

The maximum rates of superelevation usable on roadways are controlled by several factors, including pavement surface type, climate conditions, terrain conditions, and traffic usage. A superelevation rate of 0.12 may be used on low-volume gravel-surfaced roads to facilitate cross drainage; however, rates this high may cause higher travel speed, conducive to rutting and displacement of gravel. Superelevation rates greater than 0.06 should not be used for roads with paved surfaces (high- or intermediate-types).

2.2.8. Right-of-Way (ROW) Width

Right-of-way width adequate to accommodate the construction, proper drainage, and maintenance of the roadway should be obtained. A wide right-of-way permits construction of gentle slopes and widening or strengthening of the pavement as traffic increases.

2.2.9. Vertical Clearance

Vertical clearance at underpasses should be at least 4.3 m (14 ft) over the entire roadway width. It is a good idea to add 150 mm (6 in) to this height to allow future

3.3. Asphalt C oncrete Pavements

Asphalt concrete (AC) pavements are considered to be high-type pavements and are intended to serve intermediate to high traffic volumes or heavy wheel loads. Conventional AC pavements are layered systems, typically consisting of an asphalt concrete surface placed on one or more layers of bound or unbound granular materials, which in turn are placed on the existing subgrade soil. The various layers of a conventional AC pavement consist of the following material types and typical thicknesses:

- AC layer that is 50 to 150 mm (2.0 to 6.0 in) thick.
- Aggregate (gravel) base course that is 150 to 300 mm (6.0 to 12.0 in) thick.
- Compacted subgrade.

Figure 3.1 shows a typical cross section of a conventional AC pavement.

The basic principle supporting the design and performance of such layered pavement systems is to provide higher quality (stronger) materials in the top layers, where the stresses from vehicle loads are high, and to use lower quality (weaker) materials in the lower pavement layers, where stress intensities are much lower. For example, in Figure 3.1 the surface course should have the highest strength and the subgrade the lowest strength.

3.4. Portland Cement Concrete Pavements

3.4.1. PCC Pavement Types

Portland cement concrete (PCC) pavements are referred to as rigid pavements. The PCC is typically placed on an aggregate (gravel) base layer. A typical cross section of a PCC pavement is presented in Figure 3.2.

The types of concrete pavement that are typically constructed on rural roads include:

- Jointed plain concrete pavement (JPCP).
-

Load transfer across PCC joints is very important in reducing stresses at the joints. Aggregate interlock across a joint is typically the only form of load transfer in PCC rural roads, although this frequently results in joint faulting. Load transfer devices, such as dowel bars, can also be used to provide additional load transfer across a PCC joint. However, use of load transfer devices in thin PCC (less than 200 mm [8-in] thick slabs) can result in severe joint deterioration due to high stress concentrations around the devices. Because of the shortened life of under-designed PCC pavements and their costly rehabilitation, extreme caution should be used in constructing PCC slabs that are less than 200 mm (8.0 in) thick. Also, the SDDOT Office of Local Government Assistance (605-773-4831) should be consulted regarding aggregate sources, as some aggregates will contribute to premature PCC deterioration.

3.4.2. Function of the Various Layers in a PCC Pavement

The PCC surface layer performs two primary functions – it provides a smooth riding surface and significant load distribution over a relatively large area. In a properly designed PCC pavement, the vertical stress levels in the layers below the PCC are only a small fraction of those applied on the pavement surface. Due to the tremendous stiffness of the PCC layer (with respect to the underlying base and subgrade layers) the PCC layer provides a vast majority of the pavement's load-carrying capabilities. Therefore, the most effective way to reduce stresses (and hence, reduce cracking) in a PCC pavement is through increased PCC thickness. Increases in PCC strength or underlying base/subgrade support only have a minimal effect in reducing PCC stresses. However, this does not preclude the importance of the use of good bases and subgrades.

A base in a PCC pavement is provided directly under the concrete surfacing. Base material may either be of natural selected aggregate (gravel) or stabilized soil with emphasis on a minimum amount of fine-grained materials. One of the primary functions of a base is to prevent the pumping of these fine-grained subgrade materials from beneath the PCC layer. When pumping occurs, corner breaks, joint faulting, and slab cracking can be expected. The simultaneous existence of three factors – heavy traffic loads, pumpable fine-grained soils, and excessive subgrade moisture – can result in the pumping of fines. Where these three critical factors prevail, the use of a base under the PCC is highly encouraged. Other functions of PCC pavement bases include:

- Provide improved load transfer at pavement joints.
- Provide uniform support for the pavement.
- Provide a firm improved platform for pavement construction.
- Provide a drainage layer for water entering the pavement system.

The typical base layer thickness on a rural PCC pavement is 100 to 150 mm (4 to 6 in).

Table 4.1.Suggested gravel road repair alternatives (continued).

Distress type	Distress severity	Typical repair techniques
Potholes	Low	Blade surface of roadway.
	Medium	Blade surface or blade surface, add material

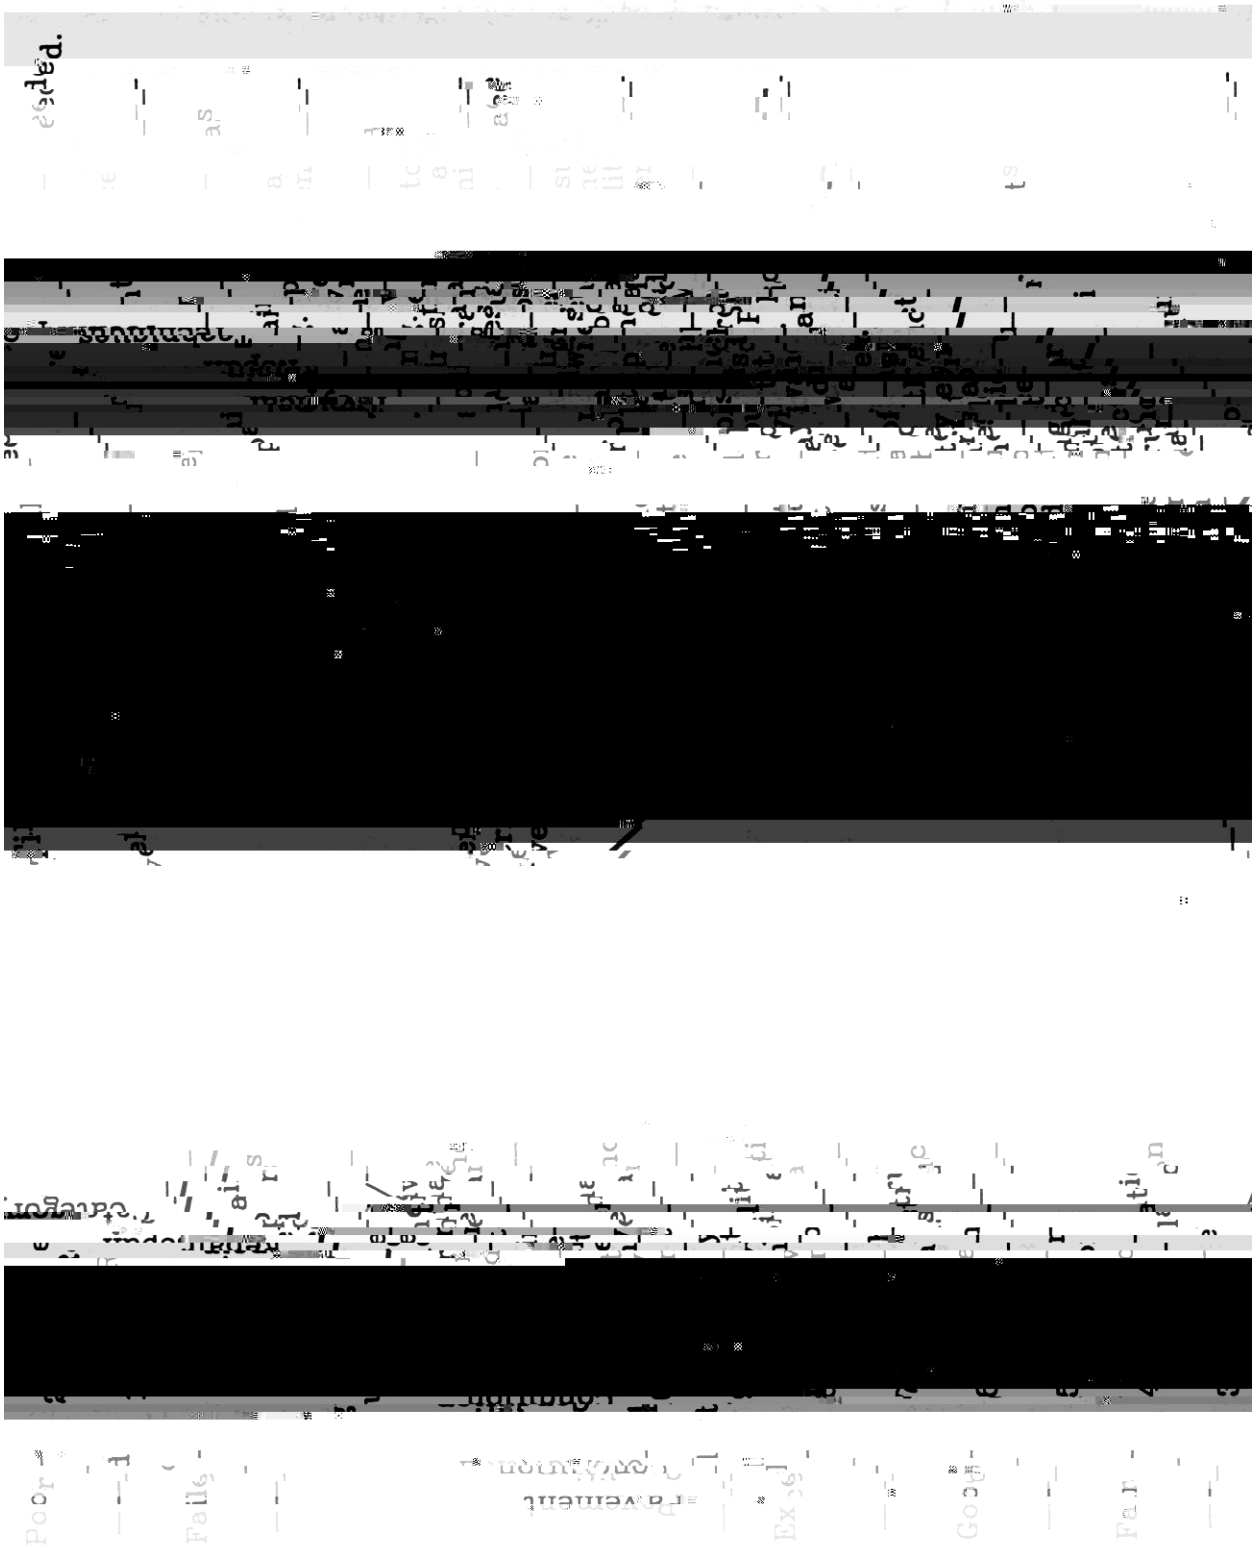

Ditches must periodically be cleaned to restore drainage. This work is typically

Table 4.3. Gravel road maintenance guidelines.

ADT	ADTT	Terrain	Gravel frequency, years	Blading frequency, per month
≥ 50	High	Level	4	4
		Rolling	5	4
		Mountainous	4	4
	Low	Level	7	3
		Rolling	7	3
		Mountainous	6	3
< 50	Low	Level	5	2
		Rolling	7	2
		Mountainous	6	2

ADT = average daily traffic. ADTT = average daily truck traffic .

5. FLEXIBLE PAVEMENT DESIGN AND REPAIR

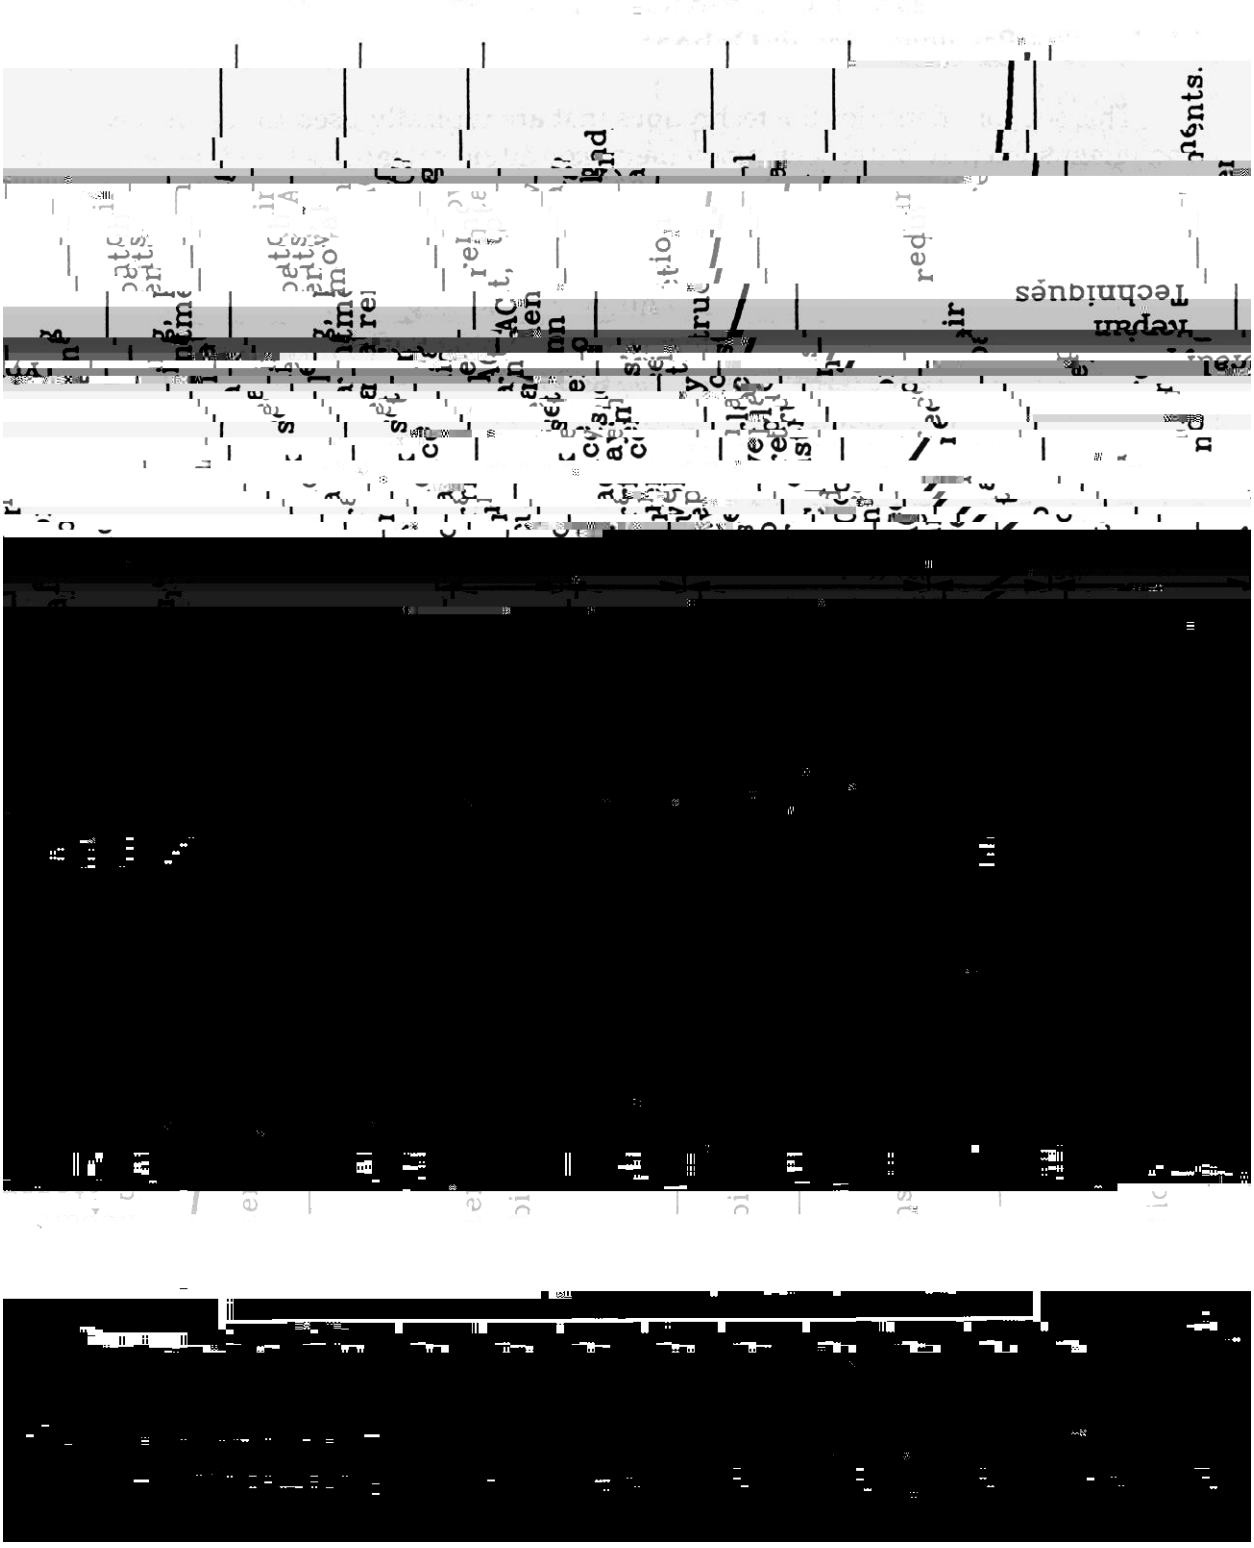

5.1.1. Flexible Pavements in Excellent Condition (Rating Value of 86 to 100)

Flexible pavements in excellent condition typically consist of newly -constructed or well -maintained pavements that are in sound structural condition. Typically, the only distr esses (if any) in a flexible pavement in excellent condition are minor hairline cracks and minor depressions.

Repairs to flexible pavements in excellent condition typically consist of

5.1.4. Flexible Pavements in Fair Condition (Rating Value of 41 to 55)

Pavement deterioration is becoming more advanced in flexible pavements in fair condition. Block cracking is common, and weathering of the AC surface is quite noticeable. The cracks are generally greater than 13 mm (0.5 in) wide, and deterioration of the cracks is prevalent. Rutting in the wheelpaths is more pronounced and may be over 13 mm (0.5 in) deep. Areas of medium- to high-severity alligator cracking may also be present in the wheelpaths.

For flexible pavements in fair condition, minor to major rehabilitation is typically required. The appropriate form of repair is highly dependent on the types of distresses present. Scenarios of different pavement conditions and suggested repairs are discussed below.

Scenario 1: If the pavement distresses are not predominantly load related (e.g., minimal amounts of alligator cracking and rutting) and primarily consist of longitudinal, transverse, and block cracking, an appropriate form of repair includes sealing cracks, full-depth patching of any alligator-cracked and potholed areas, and placement of a thin (38 to 50 mm [1.5 to 2.0 in]) AC overlay. Partial-depth removal of the AC layer may be necessary to accommodate grade constraints, such as overpass clearance requirements, that cannot be overlaid.

Scenario 2: If only minor amounts of alligator cracking are evident and the AC surface is either significantly oxidized or rutted, repair should include the partial-depth removal (milling) and replacement of the AC surface.

Scenario 3: If alligator cracking is evident over much of the pavement, especially the wheelpaths, complete removal and replacement of the AC layer is suggested. If the alligator cracking occurred over a typical pavement service life (20 years or more) and similar traffic conditions are expected, placement of a similar thickness of AC is most likely sufficient. However, if the alligator cracking occurred over a shorter time period or substantially higher truck volumes are anticipated, a greater thickness of AC is needed. If the base thickness is inadequate, pulverizing the in-place AC and combining it with the upper portion of the underlying base course before placing a new AC wearing course should be considered.

5.1.5. Flexible Pavements in Poor Condition (Rating Value of 26 to 40)

Flexible pavements with this condition rating are badly deteriorated. Severe alligator cracking is common, with pieces of AC missing and potholes present. Rutting is also common on flexible pavements in this condition, and the pavement's rideability is typically poor.

Flexible pavements in this condition generally require major rehabilitation. The repair techniques discussed in Scenario 3 are typically appropriate. However, if significant quantities of the underlying base and subgrade require stabilization prior to placement of the new AC layer(s), it may be more appropriate to perform complete reconstruction. The actual percentage of base course/subgrade stabilization at which total reconstruction becomes more cost-effective will vary from county to county, depending on actual construction costs.

5.1.6. Flexible Pavements in Very Poor and Failed Condition (Rating Value of 0 to 25)

Flexible pavements in either very poor or failed condition have reached a condition level in which traffic operation is difficult. Potholes and alligator cracking are extensive, and rut depths may exceed 20 mm (0.75 in). Complete reconstruction is the only appropriate means of pavement repair.

5.2. Flexible Pavement Repair Techniques

5.2.1. Crack Sealing

The purpose of sealing cracks in a flexible pavement is to minimize the amount of water entering the pavement system through the pavement surface and to minimize the amount of deterioration (spalling, additional cracking) along the edges of cracks.

Procedures: There are many methods of sealing (or filling) cracks in a flexible pavement. An illustration of some of these methods is provided in Figure 5.2. One of the easiest and cheapest methods is to simply blow debris out of the cracks with an air compressor and fill the cracks with a suitable hot-pour asphalt sealant (method A in Figure 5.2). Unfortunately, use of this method typically results in poor crack sealant performance. More elaborate methods of crack sealing can include crack routing, backer rod placement, use of high-quality sealant materials, and placement of a sealant overband. These advanced methods obviously cost more initially, but the increased sealant performance and life generally offset the increase in initial cost.

The SDDOT currently specifies the use of the standard recessed bandaid method (method E) for AC-surfaced pavements. SDDOT experience is that the sealant configuration has performed as well as any method in the State of South Dakota. However, in locations of heavy pedestrian use or turning vehicles, placement of the overband is not recommended. During summer months, the sun-heated sealant will be picked up by pedestrians and turning vehicles. Therefore, the use of the standard reservoir-and-flush configuration (method D) is recommended.

The results of a recent national study on flexible pavement joint sealants indicated that both methods D and E exhibited very good performance characteristics. Therefore,

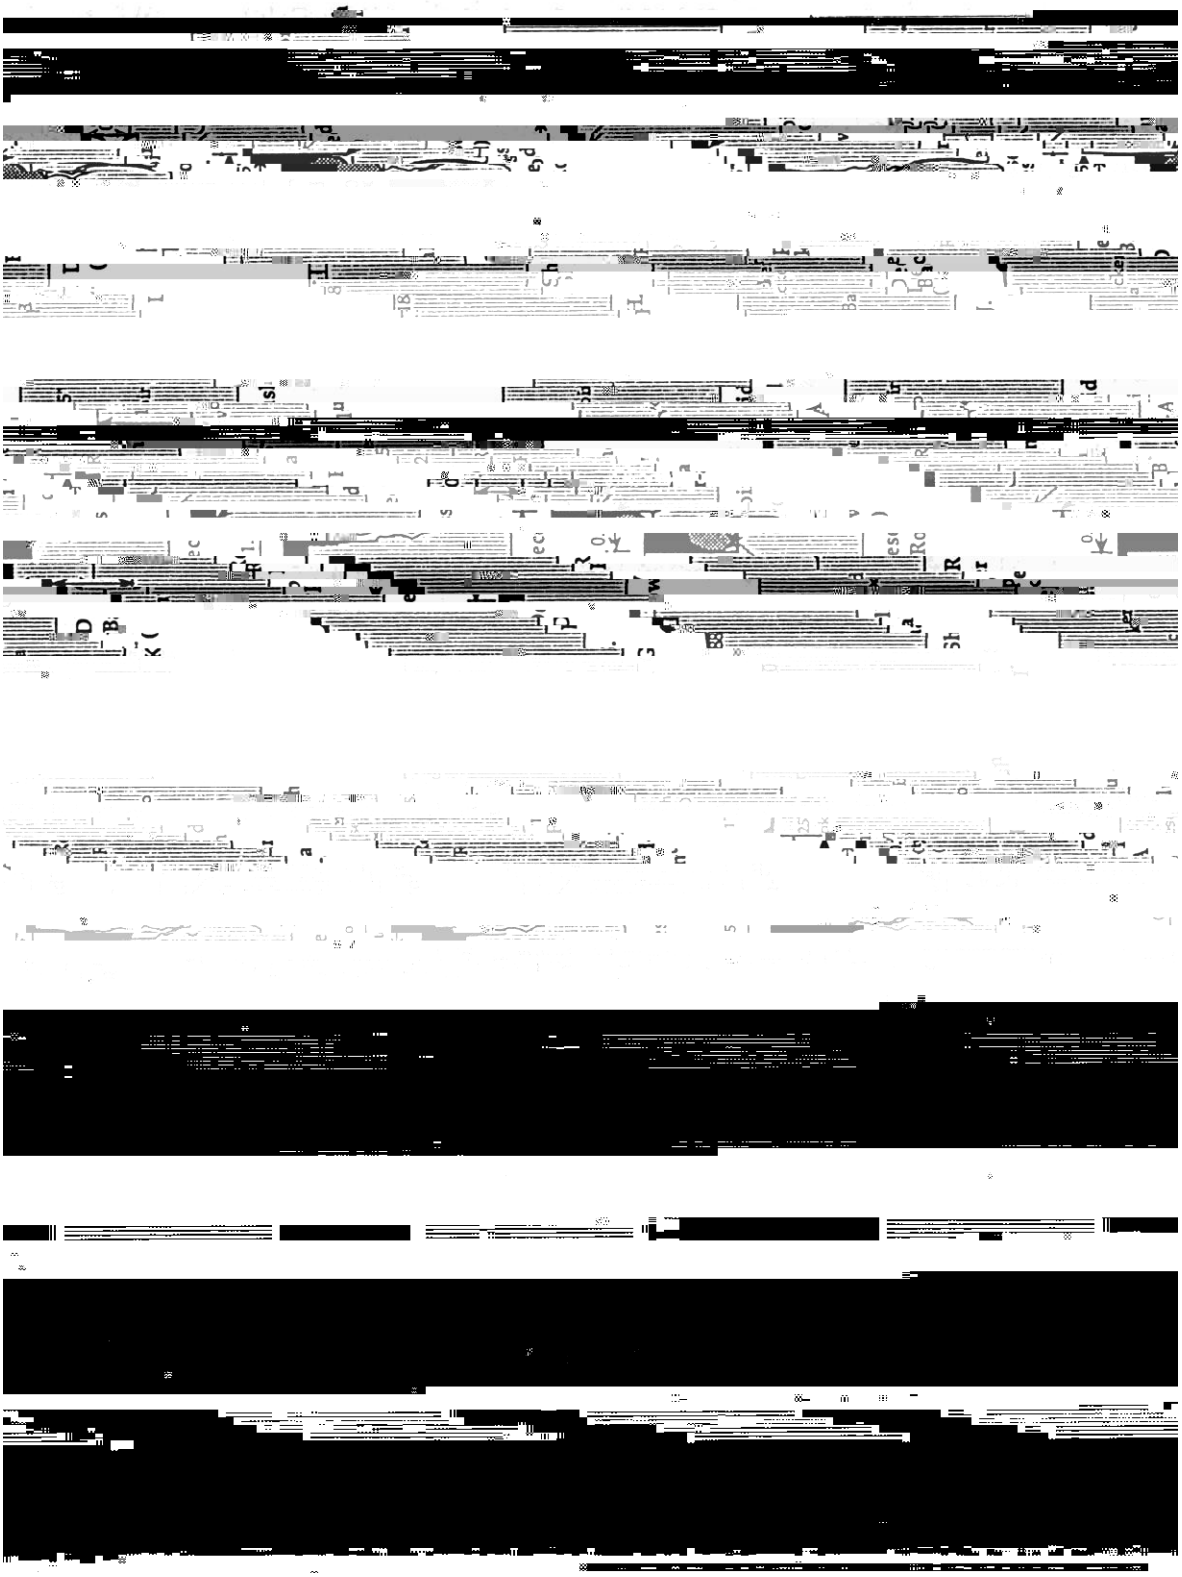

5.2.2. Pothole Patching

Potholes create a significant hazard to the traveling public. Extensive vehicle damage and personal injury can result when a vehicle hits a pothole. Therefore, patching of potholes, regardless of the overall pavement condition, is necessary.

Procedures: To restore smooth rideability, potholes should be permanently patched (emene ET /AP1toiD4 (ar)-a [((93.62v(p /2v(/P)c24.344] (s)4 (s)4 (s)s)4 p)4 (o)-3 (l>>BDCT3(efor)-

additional traffic loadings, creating potential hazards (i.e., potholes) and increasing the size of the area to be repaired.

Identification of areas to be patched: Areas that exhibit moderate- to high- severity alligator cracking should be patched. In addition, areas of low -severity alligator cracking that visibly deflect under traffic loadings should be patched.

Identification of low -

through the pavement surface, minimize raveling of the existing surface, and min imize the oxidation of the underlying asphalt materials.

Procedures: The recommended procedures for applying surface treatments are outlined in section 360, Asphalt Surface Treatment, of the SDDOT Standard Specifications for Road and Bridge Construction. A similar specification is provided in SDDOT Performance Standard Function 2107, Seal Coating. A summary of the

Thickness requirements: Most AC overlays constructed on South Dakota's existing AC-surfaced rural roads are functional overlays that are approximately 38 to 50 mm (1.5 to 2.0 in) thick. The 38 to 50 mm (1.5 to 2.0 in) thickness is generally the minimum thickness of AC that can be properly placed. AC thicknesses should always be at least twice the diameter of the maximum aggregate size in the AC mixture, and in most AC mixtures, a 20- to 25-mm (0.75- to 1.0-in) diameter maximum aggregate size is used.

There are instances when more than a minimum-thickness functional overlay is required on an existing AC-surfaced road. Also, an overlay thickness greater than 20 to 25 mm (0.75 to 1.0 in) is necessary on an existing blotter road in order to achieve good pavement performance. In these situations, the required overlay thickness is dependent on the condition and structural capacity of the existing pavement, as well as the forecasted level of traffic. A simple method of determining the required AC overlay thickness is through the use of the following equation:

$$ACOL = 2.5\,SN - 2.5\,C_d\,[\,0.40\,H_{AC} + 0.14\,H_{AGG}] \qquad \text{(Eq. 5.1)}$$

where

ACOL = Required AC overlay thickness, in.
SN = Required pavement structural number obtained from Table 5.1 in section 5.2.7 of this document. Please refer to Table 5.1 for discussion of the assumptions used in calculating the required SN.

Aggregate gradation is a primary consideration in all asphalt concrete mix design. Coarse aggregates, fine aggregates, and mineral filler should be blended to achieve a proper gradation. Aggregate gradations should be dense-graded, yet still contain sufficient void space to permit enough asphalt cement for durability, while still leaving some air space to avoid bleeding and/or rutting. Use of excessive fines should be avoided. These excess fines can result in mixes which are too densely graded and do not allow sufficient air void space. Mixtures high in fines may also be more sensitive to slight changes in asphalt content.

The proper grade of asphalt cement must be selected to ensure adequate performance. This selection is based largely upon geographical location and the type of mixture being designed. In colder climates, such as in South Dakota, lower viscosity asphalts (such as an AC-10 or AC-5) should be considered to avoid low-temperature cracking.

Optimum asphalt content is determined through laboratory testing using either the Marshall criteria or other design methods (e.g., Hveem and SHRP). Optimum asphalt content is generally determined by finding the asphalt content which corresponds to the median air void content (typically 4 percent) of the specifications. Other mix design parameters such as stability, flow, and voids in mineral aggregate (VMA) are then checked against the specifications and the mix is either accepted or redesigned if necessary.

Air void content is one of the more critical parameters in mix design. The air void content in the compacted dense-graded mixture is usually suggested to be between 3 and 5 percent. If the void content is too low, the result is reduced intergranular contact and lower shear resistance, which can lead to rutting or bleeding problems. Air void contents which are too high result in a mix which is more permeable to air and water than is desirable, allowing for premature oxidation or stripping of the asphalt cement.

Please refer to sections 5.2.4 and 5.2.5 of this document for suggested construction inspection activities during placement of blotter surfaces and asphalt concrete layers.

Table 5.1. Suggested AC-Surfaced Pavement Thicknesses.

\

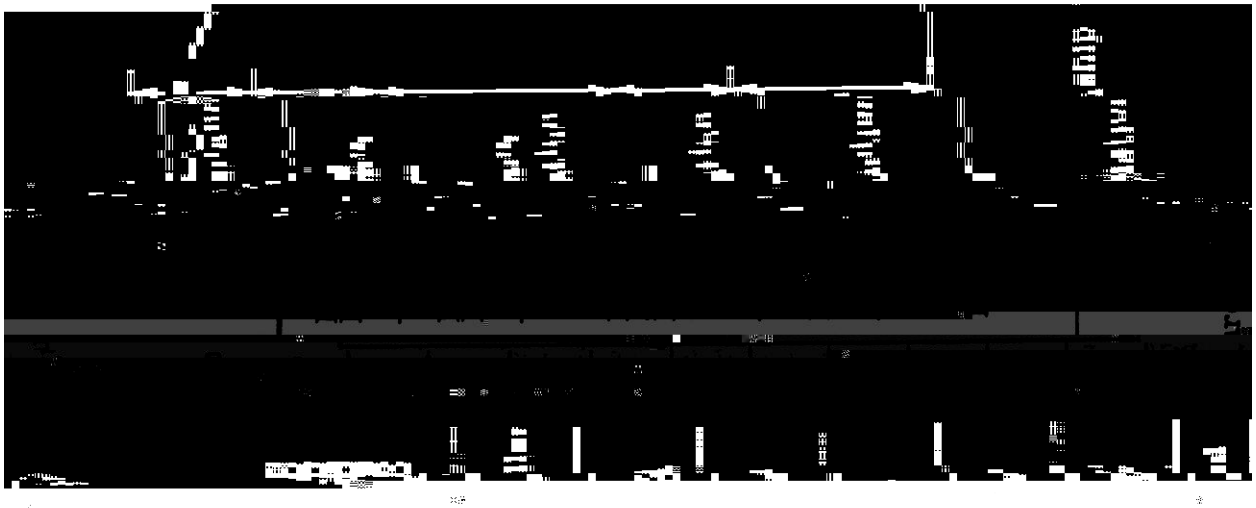

6.1.2. JPCP in Very Good Condition (Rating Value of 71 to 85)

JPCP in very good condition may exhibit up to 7.5 m (25 ft) of cracking in a 90 m^2 (1,000 ft^2) pavement area. The majority of the cracks are generally very tight. However, some of the cracks may be as much as 6 mm (0.25 in) wide. Other evident distresses may include PCC spalling at the joints and joint sealant deterioration.

Repairs to JPCP in this condition may be considered preventive maintenance. Repair activities include crack sealing, joint sealing, and partial-depth spall repair.

6.1.3. JPCP in Good Condition (Rating Value of 56 to 70)

JPCP in good condition may exhibit from 7.5 to 23 m (25 to 75 ft) of cracking in a 90 m^2 (1,000 ft^2) area. However, unlike JPCP in very good condition,4cIGN Hos5(y)5.6tracksg25.6 BT 1

27 4891239.8hi

6.1.5. JPCP in Poor Condition (Rating Value of 26 to 40)

A JPCP in poor condition is typically in need of extensive full-depth patching and, in some cases, slab replacement. Extensive slab cracking is typical, and shattered slabs (slab cracked into four or more pieces) are not uncommon. Often, transverse joint faulting is significant and quite evident to the traveling public. If low-durability aggregates were utilized in the PCC mixture during construction, advanced stages of D-cracking can be expected in JPCP in poor condition.

Maintenance of JPCP in poor condition can include the repair of partial-depth spalls along joints and cracks. Crack and joint sealing may still be appropriate, depending on the overall pavement condition. However, for significantly deteriorated pavements, the beneficial effects of crack and joint sealing will be minimal.

Major rehabilitation is generally required on JPCP in poor condition. The recommended pavement rehabilitation activities are similar to those for JPCP in fair condition, but somewhat greater repair quantities should be expected. Typical repair techniques for JPCP in poor condition include full-depth repairs, slab replacement, pavement grinding, and AC overlay construction. Another rehabilitation option for PCC pavements in poor condition is crack and seat. This technique consists of cracking the existing PCC pavement into smaller pieces (roughly 0.4 to 0.6 m^2 [4 to 6 ft^2]), seating the broken pavement into the underlying base or subgrade with a heavy roller, and overlaying the seated pavement with AC.

6.1.6. JPCP in Very Poor and Failed Condition (Rating Value of 0 to 25)

A JPCP in this condition is so severely deteriorated that neither maintenance nor rehabilitation is appropriate. Generally at least 50 percent of the total number of PCC slabs arecracked, and rideability is very poor.

Typically, the recommended repair technique for JPCP in very poor to failed condition is complete reconstruction. Maintenance and rehabilitation activities are generally ineffective in a JPCP in this condition. Crack and seat can also be an appropriate rehabilitation technique for a PCC pavement in very poor condition.

6.2. Jointed Plain Concrete Pavement Repair Techniques

6.2.1. Joint and Crack Sealing

The sealing of joints and cracks in JPCP serves two functions. First, the sealing minimizes the amount of water entering the pavement system. Second, the sealant prevents incompressible materials (e.g., sand and gravel) from infiltrating the

Cracks

1. If the crack is less than 13 mm (0.5 in) wide, it should be routed to the specified transverse joint width (dependent on slab size) outlined in Function 2135. The routing will also remove old sealant, oil, asphalt, and other foreign materials.
2. If the crack is wider than 13 mm (0.5 in), both crack faces should be thoroughly cleaned by one or more of the following methods: sandblasting, high pressure water jet, wire brushing, and compressed air.
3. All residue from the crack face cleaning operations should be flushed with water.
4. The crack should be sandblasted and cleaned with compressed air immediately prior to sealant installation to remove all traces of dust.
5. The crack must be dry when the sealant is installed. The silicone sealant will

In general, SDDOT Function 2125 requires that holes be drilled into the exposed faces of the existing PCC on 305 mm (12-in) centers, and No. 5 bars should be epoxied into the holes. Please note that tie bars should not be provided across existing transverse contraction joints. These joints are "working" joints, and their movement cannot be restricted by a tie bar. Load transfer can be provided at transverse contraction joints by smooth dowel bars.

6.2.4. Diamond Grinding

Diamond grinding consists of the removal of hardened concrete through the use of closely spaced diamond saw blades. The major purpose of diamond grinding is to correct surface irregularities (e.g., joint faulting) or to remove a polished surface.

6.2.5. AC Overlays

AC overlays can be placed on an existing PCC pavement to correct (cover) existing surface deficiencies and to provide additional pavement structure. If properly designed and constructed, structural AC overlays (100 mm [4.0 in] thick, or greater) can significantly extend the service life of an existing PCC pavement.

One of the major concerns with AC overlays placed on a concrete pavement is reflection cracking. Reflection cracking is the development of cracks in the overlay caused by horizontal and vertical movements of cracks and joints in the underlying existing pavement. This form of cracking causes early overlay deterioration, increased pavement maintenance costs, and reduced service life of the overlay. Several methods for controlling and minimizing reflection cracking are available, including sawing and sealing of the AC overlay above the joints and cracks and the use of stress-relieving interlayers.

6.2.6 Crack and Seat or Break and Seat Followed by an AC Overlay

Crack and seat consists of cracking the PCC slab into small segments, seating the segments with heavy rollers to eliminate underlying voids, and overlaying the segments with AC. The term crack and seat is generally used for JPCP, and the term break and seat is typically used when the existing pavement is JRCP. In break and seat, either the steel must be ruptured or the bond between the steel and PCC must be broken.

The overall intent of the crack and seat procedure is to break the slab into small segments so that thermal movements of the PCC also the e(n)1 298.ed se

Table 6.1. Summary of recommended JPCP thicknesses.

Road classification and estimated daily truck traffic	Minimum aggregate base thickness (in)	Minimum PCC thickness (in)[a]
Light truck traffic (0 to 15 heavy trucks per day in design lane)	4.0	8.0[b]
Medium truck traffic (15 to 50 heavy trucks per day in design lane)	4.0	8.0[b]
Heavy truck traffic (50 to 200 heavy trucks per day in design lane)	4.0	9.5

Notes: [a]Dowel bars are recommended at the transverse joints.
[b]Recommended minimum thickness.

Construction inspection:

meters. PCC strength can be measured through compressive strength, flexural strength, or indirect-tensile strength tests on hardened PCC samples. Compressive and flexural strength tests are typically performed. In general, the PCC should have a 28-day compressive strength of at least 24 MPa (3,500 psi) or a 28-day flexural strength of 4.5 MPa (650 psi).

6.3. Jointed Plain Concrete Pavement Joints

Joint layout and type are important parameters that significantly affect the performance of JPCP. Improper joint layout and design can result in premature (sometimes almost immediate) cracking in JPCP. Excessively long joint spacing, improper intersection layout, and improper joint formation (i.e., improper or late sawing) are some of the primary culprits in joint-related JPCP cracking.

6.3.1. Longitudinal Joint Spacing

In wide JPCP slabs that are relatively thin (e.g., city streets), excessively high stresses occur in the wheel paths at the transverse joints. These load-induced stresses are further magnified by the warping and curling of the slab corners as a result of vertical temperature and moisture gradients within the slab. These high stresses can cause a longitudinal crack to initiate at the transverse joint; subsequent vehicle loadings can cause the crack to propagate longitudinally across the entire length of the slab.

To minimize the amount of longitudinal cracking, the maximum longitudinal joint spaci

7. SUBGRADE SOILS

7.1. Design Considerations

Subgrade support (strength) is an important input in almost any pavement design procedure. For the proper design of AC, PCC, blotter, or gravel roads, it is necessary to assess the existing subgrade support conditions. Underestimating the subgrade support conditions can result in overdesigned pavements. Even worse, the overestimation of subgrade support conditions can result in premature pavement failure.

Subgrade support can be represented by several parameters, including the California Bearing Ratio (CBR), the modulus of subgrade reaction (k), and the resilient modulus. The CBR has traditionally been the required design input for flexible pavement designs, and the k-value has traditionally been the required input for PCC pavement designs. The resilient modulus has recently gained acceptance in the pavement design area, and it is currently used in many flexible design procedures. An approximate relationship between CBR, k-value, and other soil parameters is published by the Portland Cement Association (PCA 1994) and is illustrated in Figure 7.1.

The *AASHTO Guide for Design of Pavement Structures* (AASHTO 1993) indicates that the resilient modulus (in psi) of many fine-grained soils is roughly 1,500 times the soil's CBR value. The AASHTO Design Guide also indicates that the resilient modulus (in psi) of many soils is approximately 19 times the k-value (in pci) of the soil.

In many instances, and especially in local road applications, accurate determination of soil strength parameters through extensive laboratory or field testing is neither practical nor feasible. However, for these situations there are ways in which the subgrade support conditions can quickly and inexpensively be estimated. These methods include the use of publis5(e)]ps5(e)lalpvitwea ntlcgbe es, area, soil's

hese

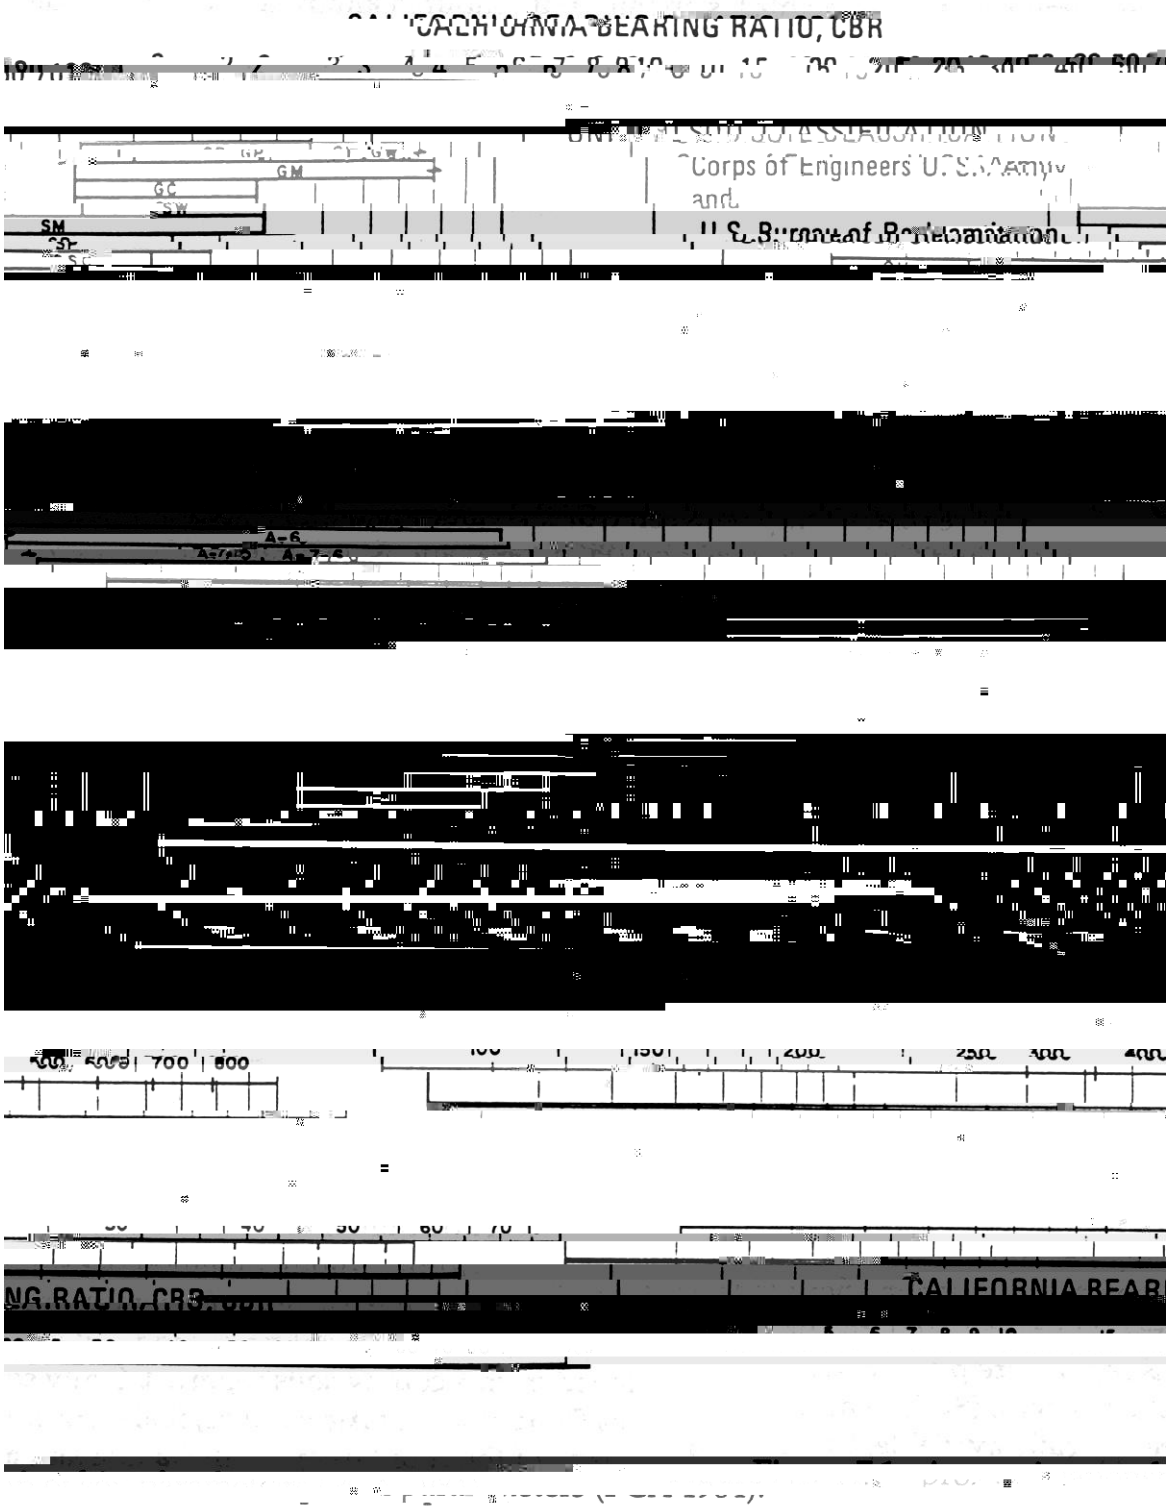
CALIFORNIA BEARING RATIO, CBR
Corps of Engineers U.S. Army
and
U.S. Bureau of Reclamation
GM
SM
A-6
700
800
CALIFORNIA BEAR

Table 7.1. Summary of relationship between liquid limit and CBR of typical South Dakota soils.

Liquid Limit, %	Approximate CBR, %
0 to 30	

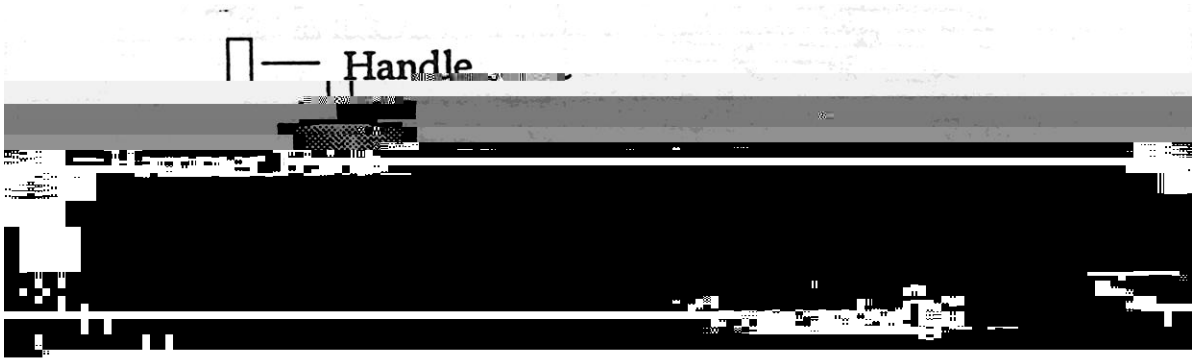
Handle

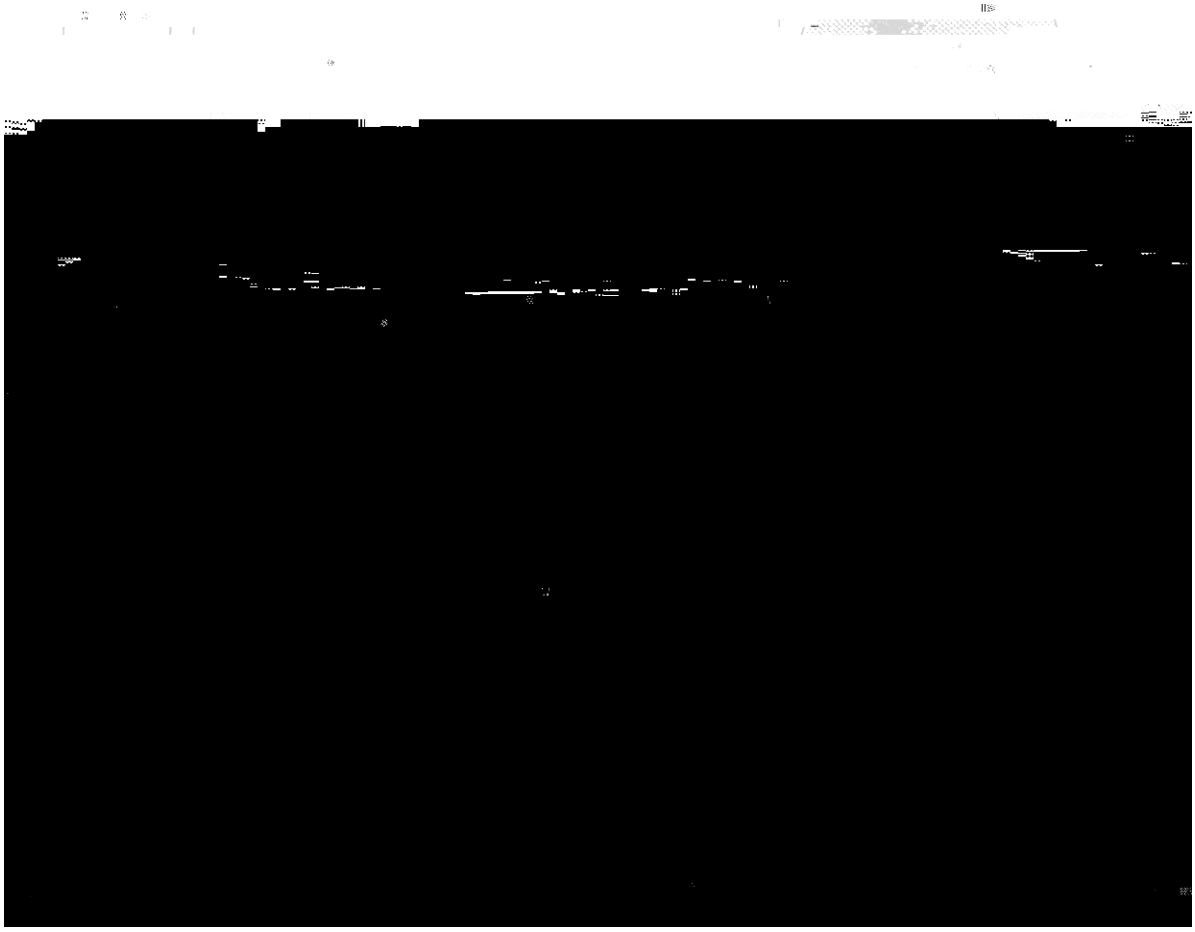

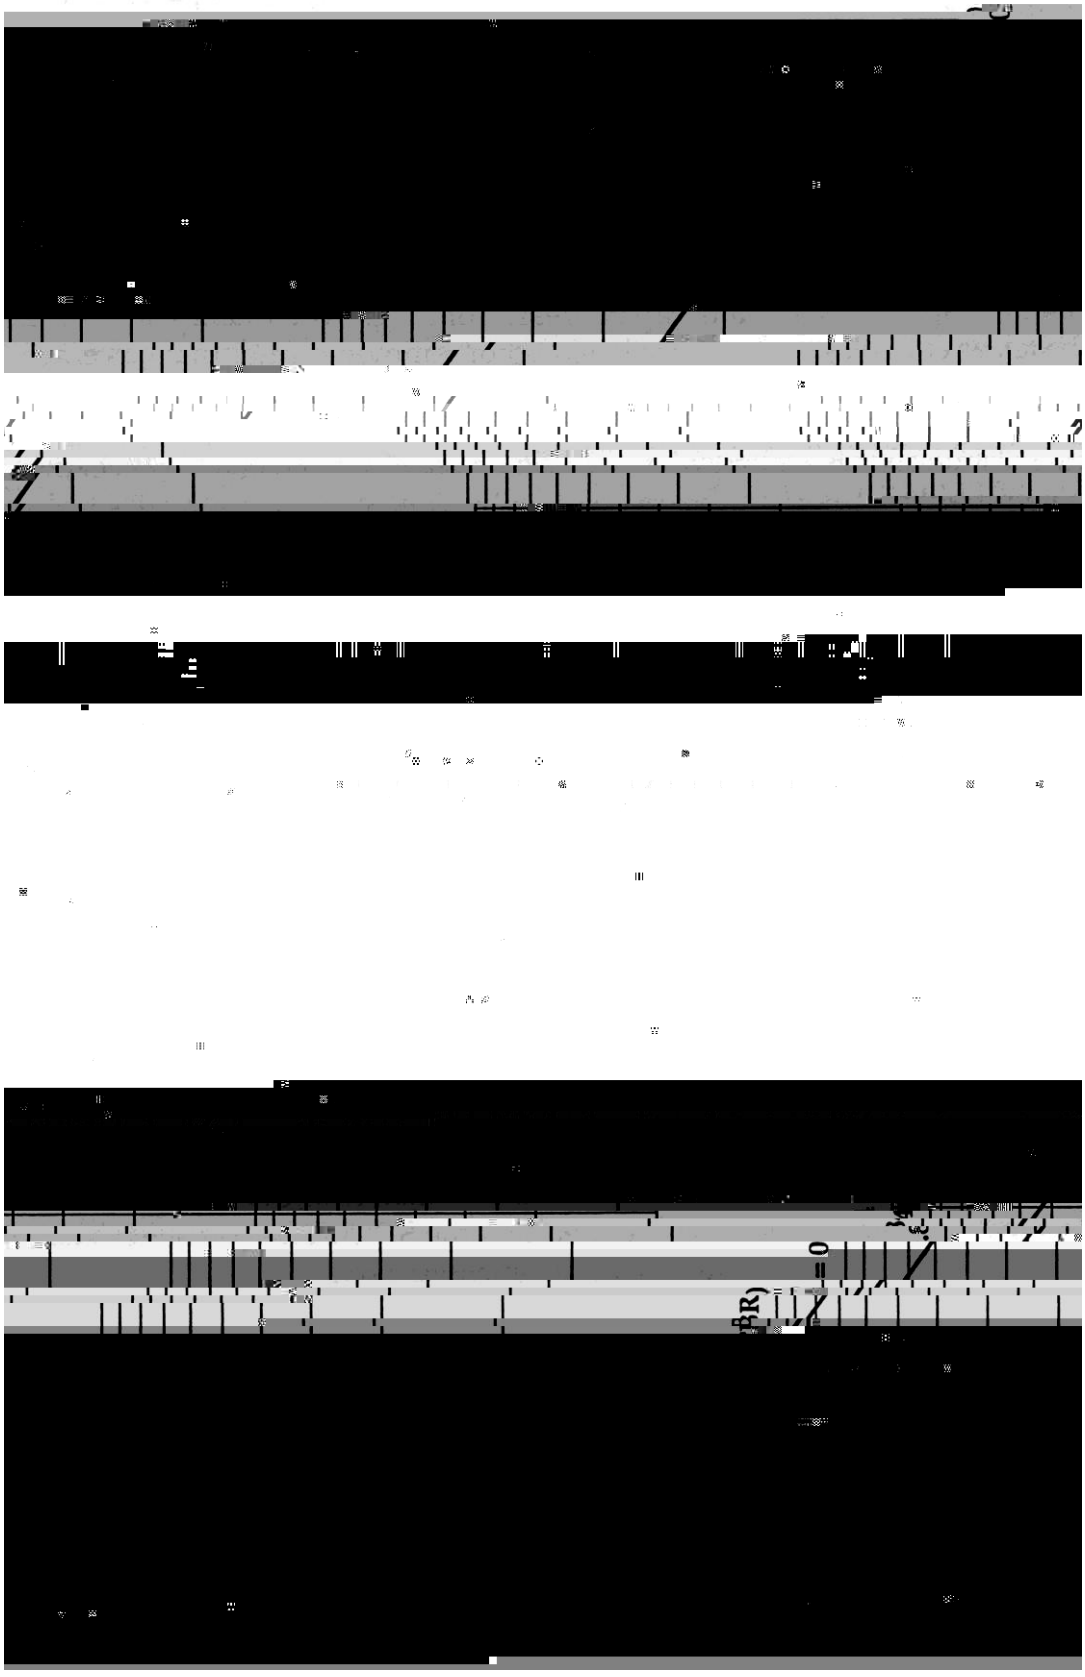

9. REFERENCES

South Dakota Department of Transportation, Performance Standard, Function 2125, October 1992, *Portland Cement Concrete Surface Repair*, Pierre, SD.

South Dakota Department of Transportation, Performance Standard, Function 2135, October 1992, *Sealing Transverse Contraction Joints, Longitudinal Joints, and Cracks in PCCP*